


Measuring Guide

To get an accurate quote, we need two measurements from your window: the inner frame width and the inner frame height, both in millimetres (mm).

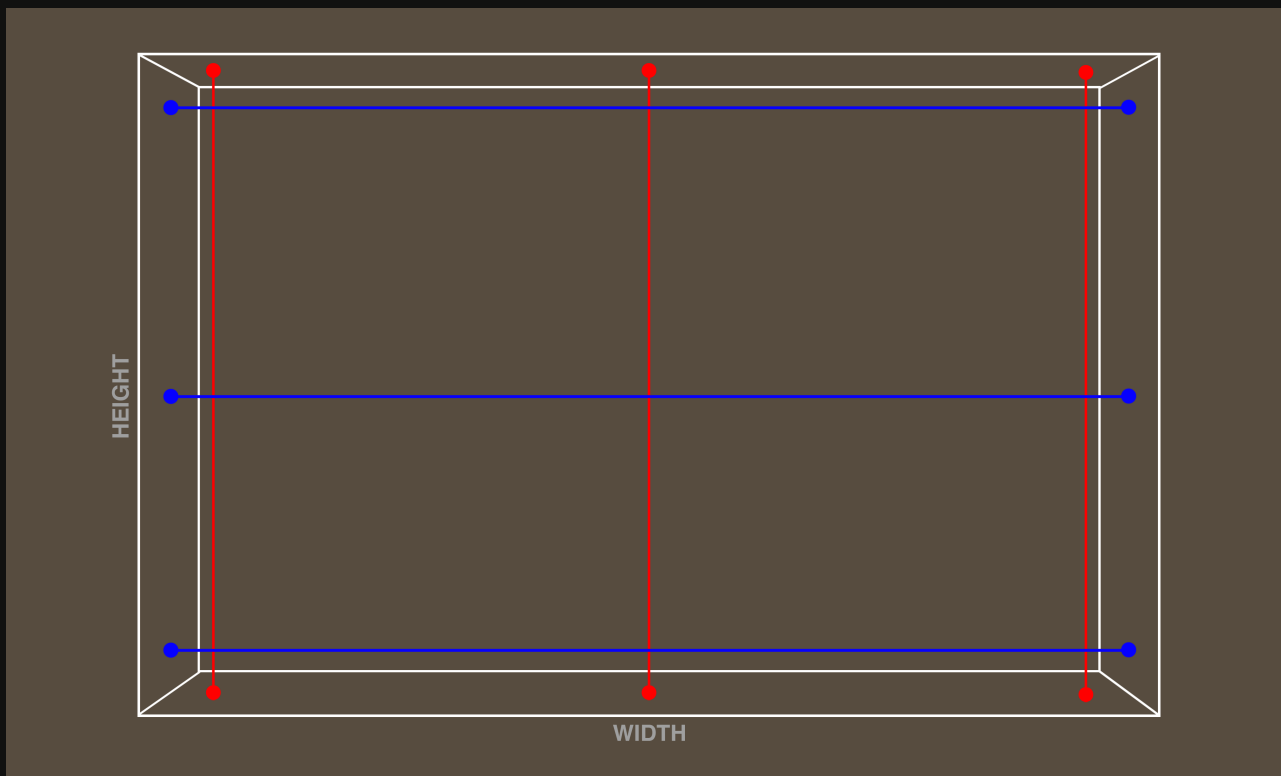

1 Measure the Width

Measure the inside of the window frame from left to right at the top, middle, and bottom. Use the largest of the three measurements.

2 Measure the Height

Measure the inside of the window frame from top to bottom on the left, centre, and right. Use the largest of the three measurements.

3 Record in millimetres

All measurements must be in millimetres (mm). Double-check before submitting — we'll verify your numbers before manufacturing begins.

4 Submit your measurements

Enter your width and height into the quote form on our website or email them to hello@deepsleepblinds.co.nz and we'll come back with upfront pricing.